

SS0506

BROAD RANGE THERMOMETER

1. Features

- 1.1 Indoor and Outdoor thermometer sensing.
- 1.2 Max/Min. Indoor/Outdoor Temperature value display.
- 1.3 Temperature Alert between $-50^{\circ}\text{C} \sim +300^{\circ}\text{C}$.
- 1.4 Real Time Clock.
- 1.5 Count UP/DOWN Timer with 99:59:59 max.
- 1.6 Thermometer function:
 - Measuring range : $-50^{\circ}\text{C} \sim +300^{\circ}\text{C}$
 - Resolution : 0.1°C
 - Precision : 1°C
 - Sample rate : Every 2 or 10 seconds for IN and OUT Door temperature
- 1.7 1.5V application
- 1.8 LCD Drive: 1/2 Bias, 1/5 Duty

2. LCD

3. Keys & Switches

3.1 Push button type:

- 3.1.1 [ON/AUTO/OFF] : -multi-functions against selected mode
- 3.1.2 [MODE] : -multi-functions against selected mode
- 3.1.3 [SET] : -multi-functions against selected mode
- 3.1.4 [▲] : -multi-functions against selected mode
- 3.1.5 [▼] : -multi-functions against selected mode
- 3.1.6 [Light] : Light the lamp

3.2 Slide switch type:

- 3.2.1 [IN/OUT]: Toggle the display of IN/OUT Door temperature.
- 3.2.2 [$^{\circ}\text{C} / ^{\circ}\text{F}$] : Toggle the display of $^{\circ}\text{C}/^{\circ}\text{F}$ temperature

4. Features description

4.1 Normal

SS0506


To set the time, switch the mode to Clock mode, then press the <SET> key to enter Clock setting state.(Hour digit in flashing)

Press <▲/▼> to set hour

Press <SET> to set minute, Press <▲/▼> to set Minutes.

Press <SET> key again return to Clock mode.

4.3 TIMER FUNCTION:

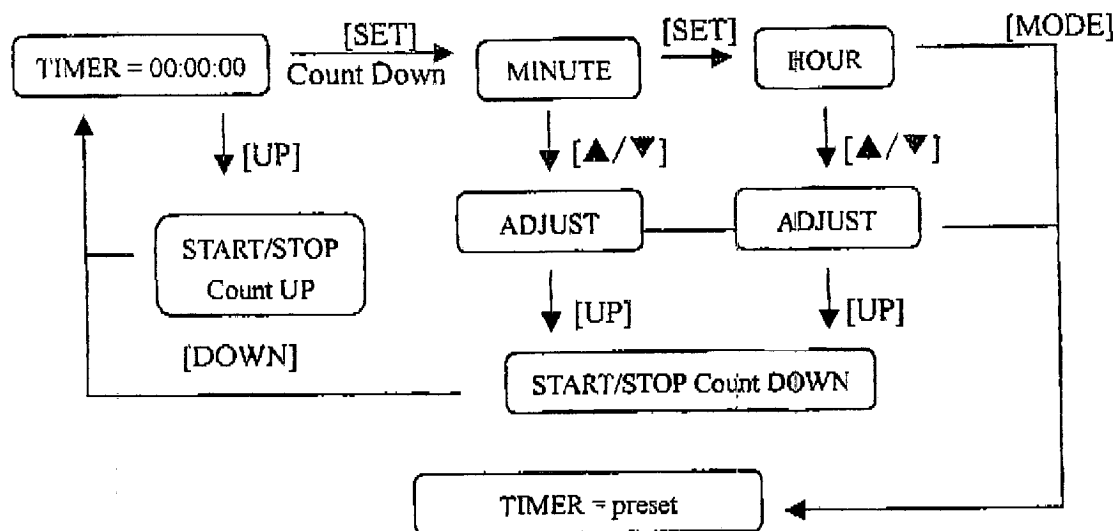

To set the timer, switch the mode to Countdown Timer mode,

Press <SET> to set countdown mode, press <▲/▼> to set hour

Press <SET> to set minute, press <▲/▼> to set minutes


Press <SET> to back to normal display.

Press <▲> to start and halt the timer.


When the timer is halted, press <▼> to clear the timer and reset the seconds.

□□□□□□□□

SS0506

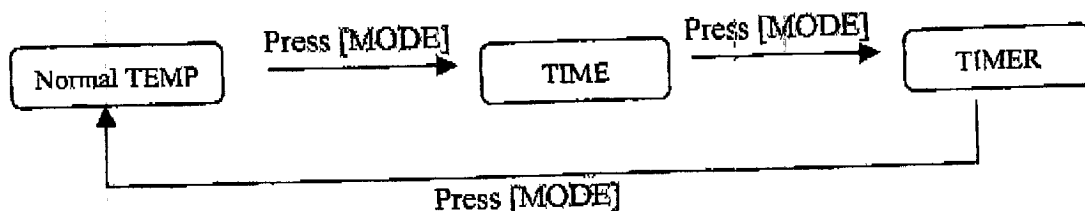


4.1 TEMP FUNCTION:

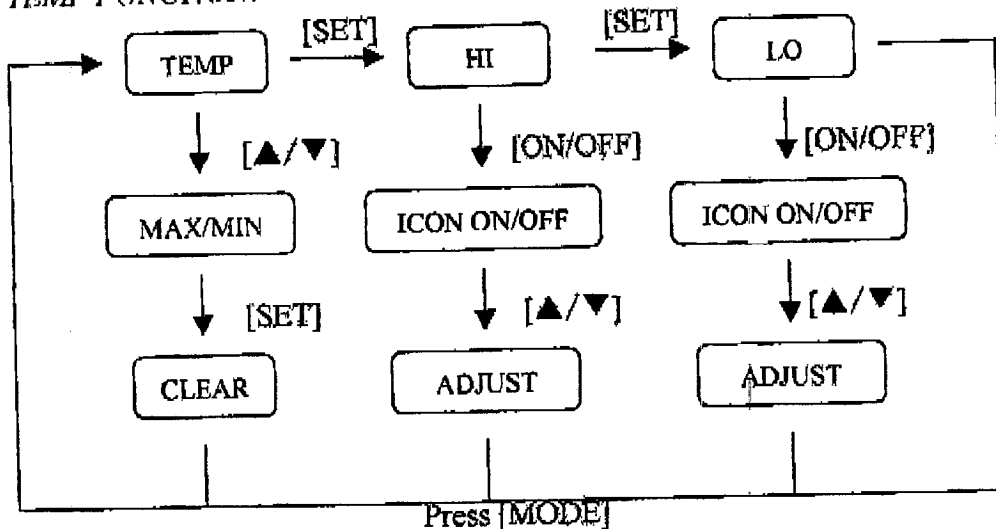


When the temperature is in the Alert range ($-50^{\circ}\text{C} \sim +300^{\circ}\text{C}$) and the Alert is set to ON, the buzzer will sound and the "ALARM" symbol in flashing, press any key to stop the sound. At this moment, the "ALARM" symbol still flash except the temperature is escape from the Alert range.

4.2 TIME FUNCTION:

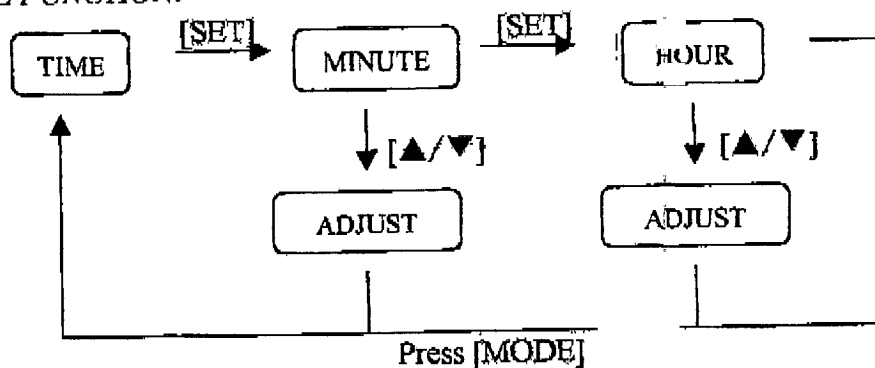

SS0506

LCD

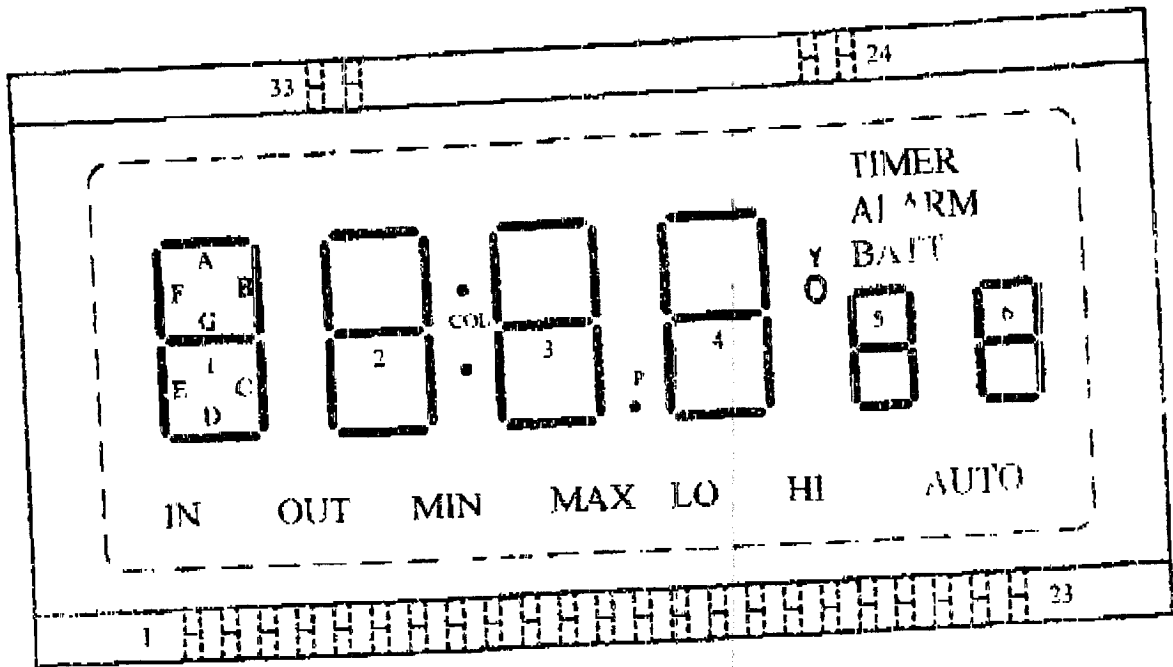

LCD 引脚

PIN	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
COM1	—	1E	1C	1D	MIN	2D	2E	2C	2C	4D	3E	3G	3C	—	4E	4G
COM2	COM2	1F	1N	OUT	MAX	1B	2F	2A	2B	COL	3F	3A	3B	1P	4F	4A

PIN	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33
COM1	4C	ALARM	5E	5D	LO	5A	COM1	—	BATT	6C	6G	6E	6D	—	—	1G	COM1
COM2	4B	Y	5F	5G	HI	PM	—	COM2	AUTO	6B	6A	—	TIME	R	5D	1A	—

欢迎索取免费详细资料、设计选型指南和光盘、样品；产品繁多未能尽录，欢迎来电查询。

[中国传感器科技信息网：HTTP：//WWW.SENSOR-IC.COM/](http://WWW.SENSOR-IC.COM/)

[工控安防网：HTTP：//WWW.PC-PS.NET/](http://WWW.PC-PS.NET/)

[消费电子专用电路网：HTTP://WWW.SUNSTARE.COM/](http://WWW.SUNSTARE.COM/)

E-MAIL：xjr5@163.com szss20@163.com

MSN：suns8888@hotmail.com

QQ：195847376

地址：深圳市福田区福华路福庆街鸿图大厦 1602 室

电话：0755-83376549 83376489 83387030 83387016

传真：0755-83376182 83338339 邮编：518033 手机：(0)13902971329

深圳展销部：深圳华强北路赛格电子市场 2583 号 TEL/FAX：
0755-83665529 25059422

北京分公司：北京海淀区知春路 132 号中发电子大厦 3097 号

TEL：010-81159046 82615020 13501189838 FAX：010-82613476

上海分公司：上海市北京东路 668 号上海赛格电子市场 2B35 号

TEL：021-28311762 56703037 13701955389 FAX：021-56703037

西安分公司：西安高新开发区 20 所(中国电子科技集团导航技术研究所)
西安劳动南路 88 号电子商城二楼 D23 号

TEL：029-81022619 13072977981 FAX:029-88789382

成都：TEL:(0)13717066236

技术支持：0755-83394033 13501568376