

measure. analyze. innovate.

# Knee Clevis Load Cell

# Mice Cievis Load Cei

Type M55112A... is designed to measure forces in the knee

• Biaxial (2 x F<sub>z</sub>)

Biaxial

- ID module available
- Low linearity errors and hysteresis errors
- Kistler system cabling
- Polarities according to SAE J211/1

clevis of the crash test dummy H3.

#### Description

The load cell is made of elements on which forces are transmitted.

Line-up of equivalent load cells:

Туре	
Kistler	M55112A
FTSS	IF-803
Denton	1587

The mechanical deformation element, applied with strain gage, serves for mechanical electrical deformation. The effectiveness of the load cell resembles the behavior of a spiral spring. The forces to be measured create mechanical stretches and buckling in the gaging member.

In order to avoid linearity errors, the deformation paths are constructively held small (high stiffness); thus a proportional behavior is realized. The force and moment proportional resistance variations are measured by a Wheatstone-type bridge circuit.

The load cell is available with ID modules, either a UPS module (Universal Parameter Memory) or a Dallas module can be chosen for this functionality. These modules are integrated in an external housing in the wiring or in the connector. Customized cable lengths and connectors with specific pin assignments are optionally available.

Type M55112A...



#### **Technical Data**

Measuring range	kN	2x8,9
Bridge output voltage	mV/V	2x1,8
Sensitivity	μV/V/kN	2x200
Bridge resistance	Ω	2x350
Ultimate load	%	2x150
Supply voltage		
without ID module	VDC	5 15
with ID module	VDC	9 12
Insulation resistance <sup>1)</sup>	ΜΩ	>90
Operating temperature range	°C	-20 80
Storage temperature range	°C	-30 90
Amplitude non-linearity	%	<1
Hysteresis	%	<1
Weight (without cable)	grams	650
	•	-

All specifications are typical at 25  $^{\circ}\text{C}$  and rated at 10 V sensor supply voltage, unless otherwise specified.

1) All wires to screen (GND), measured with 10 VDC

Page 1/2

### **Application**

Type M55112A... is designed to measure forces in the knee clevis of the crash test dummy H3.



Fig. 1: Dummy application, location knee clevis

#### **Included Accessories**

 Fixing screws, 1/4-28 UNFx5/8" (DIN912), 4 units

### Type No.

on request

#### **Optional Accessories**

 Add. label with serial number, plug side

• ID module

• Add. label with ID number at sensor

• Add. shunt

## Type No.


M015KABID on request


M015KABID

on request

#### **Ordering Key**

Conn. type, as per TP-600 Conn. assignment, as per TP-600

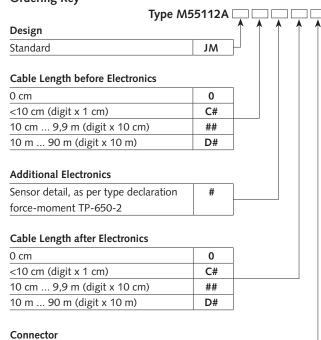

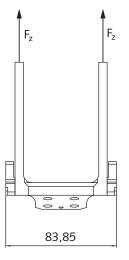

M55112A\_000-787e-06.12

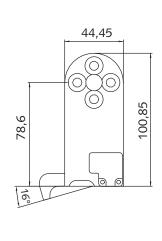


Fig. 2: Dimensions

Page 2/2

#-

This information corresponds to the current state of knowledge. Kistler reserves the right to make technical changes. Liability for consequential damage resulting from the use of Kistler products is excluded.

©2011 ... 2012, Kistler Group, Eulachstrasse 22, 8408 Winterthur, Switzerland Tel. +41 52 224 11 11, Fax +41 52 224 14 14, info@kistler.com, www.kistler.com Kistler is a registered trademark of Kistler Holding AG.