

Model 2121-2126

Shaft Reaction Torque Sensor



DESCRIPTION

Model 2121-2126 shaft reaction torque sensor is designed for installation between test pieces such as motors, switches, axles, or shafts and their mounting plate. These models operate and are calibrated in both directions. Nickel-plated alloy steel construction enhances durability in harsh, industrial environments. These models have no moving parts and utilize four bonded

strain gages on a special machined portion of the transducer to achieve a maximum non-linearity of 0.1% over a wide dynamic range. Typical applications include tire braking, motor dynamometers, friction-skid testing, and twist measurement. 100 in-lb to 500K in-lb capacities.

FEATURES

- 100 in-lb to 500K in-lb capacities
- 0.1 % non-linearity and hysteresis
- No maintenance of slip rings, bearings, or brushes
- Reduced friction error
- Low-end sensitivity
- Reaction measurements eliminate speed limitations

Safety considerations: It would be unsafe to operate Honeywell torque sensors and load cells beyond static overload or ultimate extraneous load limits as defined in the glossary of terms or, when applicable, higher than maximum speed. When in doubt, consult factory. Honeywell is not responsible for any property damage or personal injury which may result because of the misapplication of the transducer.

Model 2121-2126

PERFORMANCE SPECIFICATIONS

Characteristic	Measure
Torque range	100, 200, 500, 1K, 2K, 5K, 10K, 20K, 50K, 100K, 200K, 500 K lb-in
Non-linearity	±0.1 % of rated output
Hysteresis	±0.1 % of rated output
Repeatability	±0.05 % of rated output
Output @ rated capacity	2 mV/V (nominal)*

* Model 2126-500K output at rated capacity is 2.7 mV/V nominal. Higher capacities available. Consult factory for details.


ENVIRONMENTAL SPECIFICATIONS

Characteristic	Measure
Temperature, operating	-54 °C to 93 °C [-65 °F to 200 °F]
Temperature, compensated	21 °C to 77 °C [70 °F to 170 °F]
Temperature effect, zero	±0.002 %/of rated output °F
Temperature effect, output	±0.002 %/of reading °F


ELECTRICAL SPECIFICATIONS

Characteristic	Measure
Excitation (maximum)	20 Vdc or Vac RMS
Insulation resistance	> 5000 mOhm @ 50 Vdc
Bridge resistance	350 ohm (nominal)
Number of bridges	1
Zero balance	±1.0 % of rated output

TYPICAL SYSTEM DIAGRAM

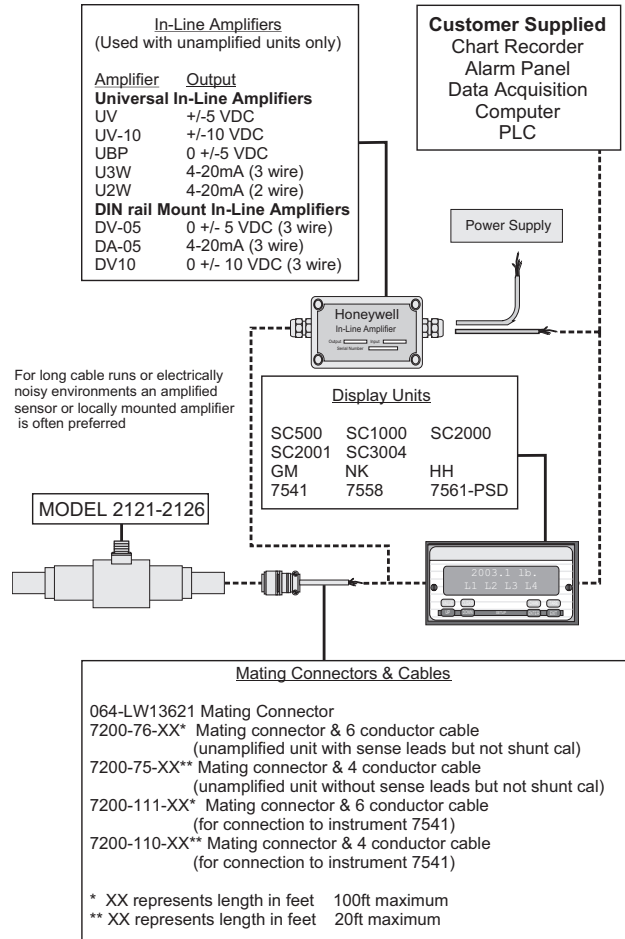

LOAD CARRYING CAPACITY

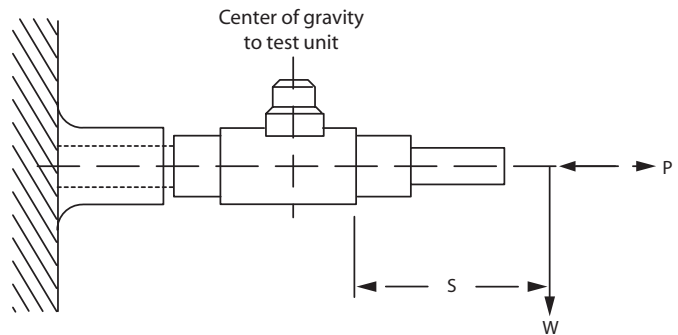

W - weight
W x S - overhung moment
S - distance to W
Do not exceed moment (W x S) or shear (W), whichever value is attained first
P = thrust

Shaft Reaction Torque Sensor

MECHANICAL SPECIFICATIONS

Model	Capacity Nm [lb-in]	Overload Nm [lb-in]	Torsional stiffness Nm/rad [lb-in/rad]	Max. overhung moment WxS Nm [lb-in]	Max. shear W N [lb]	Max. thrust P N [lb]	Key size square cm [in]
2121-100	10 [100]	15 [150]	726 [6430]	11.30 [100]	89 [20]	1245 [280]	0,48 [0.19]
2121-200	20 [200]	30 [300]	1921 [17000]	22.60 [200]	115 [26]	1780 [400]	0,48 [0.19]
2121-500	55 [500]	85 [750]	5107 [45200]	28.25 [250]	2225 [500]	2225 [500]	0,64 [0.25]
2121-1K	115 [1000]	170 [1500]	11637 [103000]	56.50 [500]	4450 [1000]	2935 [660]	0,64 [0.25]
2121-2K	225 [2000]	340 [3000]	22256 [197000]	113.00 [1000]	6675 [1500]	8900 [2000]	0,64 [0.25]
2122-5K	565 [5000]	850 [7500]	42819 [379000]	225.00 [2000]	9340 [2100]	13350 [3000]	0,95 [0.38]
2122-10K	1130 [10000]	1695 [15000]	84734 [750000]	450.00 [5000]	17800 [4000]	26670 [6000]	0,95 [0.38]
2124-20K	2250 [20000]	3390 [30000]	294875 [2610000]	1130 [10000]	28900 [6500]	44480 [10000]	1,27 [0.50]
2125-50K	5650 [50000]	8475 [75000]	772777 [6840000]	2710 [24000]	53375 [12000]	80064 [18000]	1,91 [0.75]
2125-100K	11300 [100000]	16950 [150000]	1378346 [12200000]	5650 [50000]	89000 [20000]	133440 [30000]	1,91 [0.75]
2126-200K	22600 [200000]	33900 [300000]	2253935 [19950000]	10170 [90000]	133440 [30000]	177920 [40000]	2,54 [1]
2126-500K*	56500 [500000]	85000 [750000]	2852725 [25250000]	17000 [150000]	186800 [42000]	266880 [60000]	2,54 [1]

* Calibration performed to 300000 lb-in. Consult factory for higher calibrations.


Metric dimensions and specifications are purely mathematical calculations from Standard English dimension control drawings.
Request certified drawings before designing mountings or fixtures.
Dimensions and specifications are subject to change without notice.

MOUNTING DIMENSIONS

Model	C cm [in]	L cm [in]	N cm [in]	P cm [in]	U cm [in]*	R cm [in]
2121-500, -1K, -2K	25,40 [10]	6,03 [2.38]	5,72 [2.25]	5,08 [2]	2,54 [1]	14,29 [0.56]
2122-5K, -10K	32,40 [12.75]	7,62 [3]	7,54 [2.97]	5,08 [2]	3,81 [1.50]	6,03 [2.38]
2124-20K	37,15 [14.63]	9,53 [3.75]	10,16 [4]	7,62 [3]	5,72 [2.25]	5,24 [2.06]
2125-50K, -100K	48,26 [19]	12,70 [5]	15,24 [6]	12,70 [5]	7,62 [3]	2,54 [1]
2126-200K, -500K**	53,34 [21]	14,61 [5.75]	16,51 [6.50]	13,97 [5.50]	11,43 [4.50]	2,86 [1.13]

* Tolerance on shaft diameter +0.0000 - 0.0005

** Calibration performed to 300000 lb-in, consult factory for higher calibrations

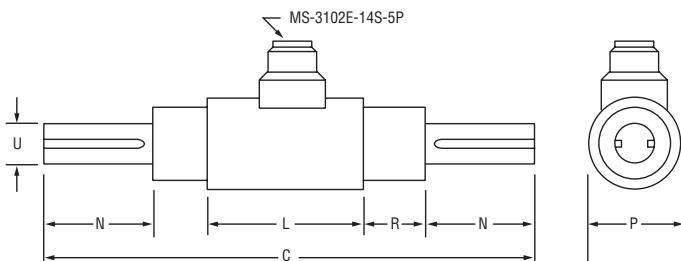

For reference only

Model 2121-2126

Shaft Reaction Torque Sensor

Warranty. Honeywell warrants goods of its manufacture as being free of defective materials and faulty workmanship. Honeywell's standard product warranty applies unless agreed to otherwise by Honeywell in writing; please refer to your order acknowledgement or consult your local sales office for specific warranty details. If warranted goods are returned to Honeywell during the period of coverage, Honeywell will repair or replace, at its option, without charge those items it finds defective. **The foregoing is buyer's sole remedy and is in lieu of all warranties, expressed or implied, including those of merchantability and fitness for a particular purpose. In no event shall Honeywell be liable for consequential, special, or indirect damages.**

While we provide application assistance personally, through our literature and the Honeywell web site, it is up to the customer to determine the suitability of the product in the application.

Specifications may change without notice. The information we supply is believed to be accurate and reliable as of this printing. However, we assume no responsibility for its use.

For more information about Sensing and Control products, visit www.honeywell.com/sensing or call +1-815-235-6847

Email inquiries to info.sc@honeywell.com

⚠ WARNING
PERSONAL INJURY

- DO NOT USE these products as safety or emergency stop devices or in any other application where failure of the product could result in personal injury.

Failure to comply with these instructions could result in death or serious injury.

⚠ WARNING
MISUSE OF DOCUMENTATION

- The information presented in this catalogue is for reference only. DO NOT USE this document as product installation information.
- Complete installation, operation and maintenance information is provided in the instructions supplied with each product.

Failure to comply with these instructions could result in death or serious injury.

Sensing and Control
Automation and Control Solutions
Honeywell
1985 Douglas Drive North
Golden Valley, MN 55422 USA
+1-815-235-6847

www.honeywell.com/sensing

SUNSTAR自动化 <http://www.sensor-ic.com/> TEL: 0755-83376489 FAX:0755-83376182 E-MAIL:szss20@163.com

008783-1-EN IL50 GLO
June 2008

Copyright © 2008 Honeywell International Inc. All rights reserved.

Honeywell